



PARTS LIST FOR MODELS K11-2174, 11-2174, 11-2175, 11-2179, 11ASP217 & 12AESP217

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	46-43	Knob - Throttle & Gear Shift	69	18-101	Bolt - Axle, Front
2	43-367	Panel - Control (Recoil Start Only)	70	3-134	Wheel Assy. (Includes Bearing)
3	*130-18	Shroud	71	101-71	Gear - Drive
4	*130-17	Shroud (Elec. Start)	72	11-123	Bearing
5	20-287	Screw - Shroud	73	76-81	Spring
6	4-176	Handle	74	79-135	Arm - Q.W.A.
7	8-57	Control - Throttle	75	102-136	Shaft - Drive
8	8-100	Control - Clutch Assy.	76	20-186	Screw
9	18-131	Bolt - C-Head	77	11-109	Bearing - Sleeve
10	6-62	Yoke	78	10-156	Cover - Gear
11	28-50	Pin - Roll	79	12-153	Plate - Q.W.A.
12	135-24	Sprocket	80	19-164	Nut - Estock
13	98-62	Ring - Retaining	81	20-156	Screw
14	135-25	Sprocket - Idler	82	2-151	Housing - Mower
15	17-2	Clip - Cable	83	22-90	Baffle - Front
16	21-191	Washer - Curved	84	7-300	Bracket Assy. - Q.W.A., L.H.
17	46-44	Knob	85	7-301	Bracket Assy. - Q.W.A., R.H.
18	7-364	Bracket Assy. - Yoke L.H.	86	1-110	Blade
19	20-145	Screw	87	15-21	Adapter - Blade
20	11-106	Bushing - Spacer	88	16-1	Key - Engine Shaft
21	110-36	Chain - No. 48, 59 Rollers	89	21-190	Washer
22	110-39	Master Link - No. 48	90	28-4	Pin - Roll
23	110-40	Half Link - No. 48	91	16-30	Key - Clutch
24	108-45	Idler - Lever Assy.	92	39-38	Disc - Clutch
25	10-187	Guard - Trailing	93	75-6	Hinge - Clutch
26	21-197	Washer	94	18-36	Bolt - Blade
27	10-164	Cover Assy. - Chain	95	21-18	Washer
28	43-373	Brace - Deck	96	26-97	Spacer - Blade Adapter
29	17-107	Clip - Yoke	97	6-46	Yoke - Clutch
30	110-37	Chain - No. 48, 30 Rollers	98	82-109	Rod - Clutch Pivot
31	26-80	Spacer - Sprocket	99	2-165	Housing - Clutch
32	110-38	Chain - No. 48, 32 Rollers	100	12-164	Plate - Shift Wire
33	135-23	Sprocket	101	20-267	Screw - SMS
34	76-96	Spring	102	17-80	Clamp - Casing
35	20-269	Screw	103	9-55	Switch
36	21-90	Washer - Lock	104	19-193	Nut
37	100-3	Fitting - Grease	105	20-299	Bolt
38	102-107	Shaft - Idler	106	9-59	Module (Recoil Start Only)
39	7-302	Bracket Assy. - Idler	107	19-65	Nut (Recoil Start Only)
40	76-80	Spring - Chain Tension	108	20-282	Bolt (Recoil Start Only)
41	19-117	Nut	109	19-141	Nut (Recoil Start Only)
42	21-14	Washer	121	21-199	Washer
43	18-1	Bolt	122	8-102	Control - Head
44	20-240	Screw	123	19-195	Nut - Jam 5/16-24
45	19-2	Nut - Keps (Elec. Start)	124	47-575	Cable w/casing
46	89-34	Hub Cap	125	54-390	Decal - "Caution"
47	19-1	Nut - Hex Keps	126	54-231	Decal - "Danger...."
48	17-123	Clamp	127	54-326	Decal - "Place foot...."
49	20-283	Screw (Elec. Start)	128	21-33	Washer
50	20-282	Screw	129	20-313	Bolt-Wheel
51	26-148	Spacer-Wheel	130	**10-234	Trailguard
52	3-135	Wheel Assy. (Includes Bearing)	131	**62-34	Rivet
53	11-117	Bearing - Sleeve	132	**17-143	Clip
54	21-113	Washer			
55	12-170	Plate - Q.W.A.			
56	20-195	Screw			
57	19-147	Nut - Q.W.A.			
58	26-105	Spacer (Elec. Start)			
59	20-288	Screw			
60	19-141	Nut			
61	22-74	Baffle - Rear			
62	18-135	Bolt			
63	76-71	Spring - Q.W.A.			
64	137-9	Tip - Q.W.A. Spring			
65	79-121	Arm - Q.W.A.			
66	130-22	Chute Extension			
67	18-127	Bolt - Carriage			
68	74-22	Seal - Strip			

ELECTRIC START ONLY

110	47-565	Harness
111	17-142	Clip - Battery
112	12-174	Battery Plate
113	143-5	Battery
114	16-27	Key - Ignition
115	19-148	Nut - Face
116	43-368	Panel - Control
117	19-149	Nut - Lock
118	9-43	Switch - Lock
119	17-111	Clip - Harness
120	47-491	Charge Pack

OPTIONAL ACCESSORY

30-0310	Grass Catcher
30-0360	Replacement Bag

* For 11ASP217 & 12AESP217, order 130-21.
 ** Model 11-2175 ONLY.