


11-2174
 11-2178
 11ASP216
 12AESP216

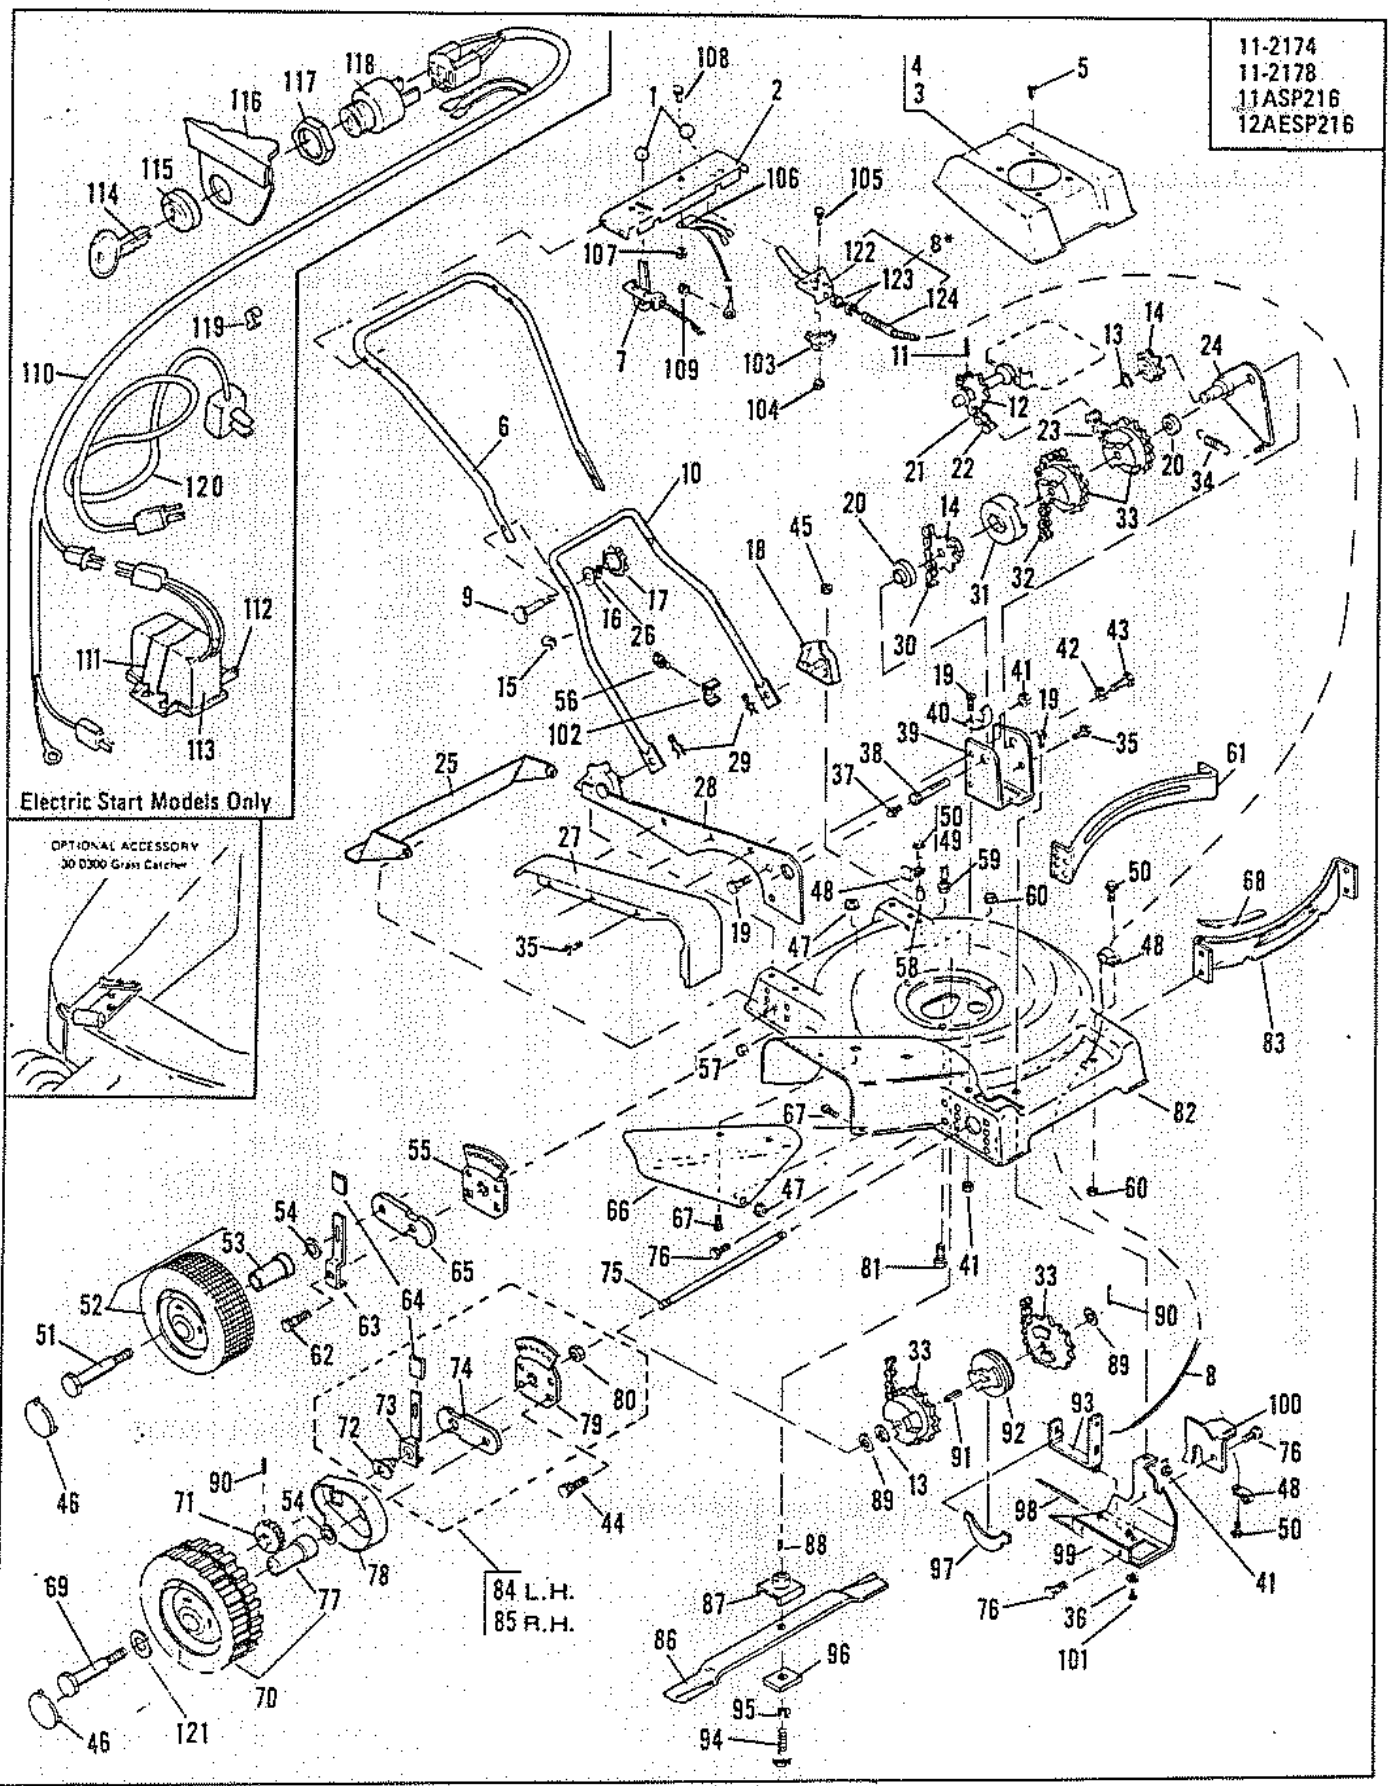

*See note page 1-309

PARTS LIST FOR MODELS 11-2174, 11-2178, 11ASP216 & 12AESP216

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	46-43	Knob - Throttle & Gear Shift	66	130-20	Chute Extension
2	43-367	Panel - Control (Recoil Start Only)	67	18-127	Bolt - Carriage
3	130-21	Shroud	68	74-22	Seal - Strip
5	20-287	Screw - Shroud	69	18-101	Bolt - Axle, Front
6	4-176	Handle	70	3-134	Wheel Assy. (Includes Bearing)
7	8-57	Control - Throttle	71	101-71	Gear - Drive
8	8-100*	Control - Clutch Assy.	72	11-123	Bearing
9	18-131	Bolt - C-Head	73	76-81	Spring
10	6-62	Yoke	74	79-135	Arm - Q.W.A.
11	28-50	Pin - Roll	75	102-136	Shaft - Drive
12	135-24	Sprocket	76	20-186	Screw
13	98-62	Ring - Retaining	77	11-109	Bearing - Sleeve
14	135-25	Sprocket - Idler	78	10-156	Cover - Gear
15	17-2	Clip - Cable	79	12-153	Plate - Q.W.A.
16	21-191	Washer - Curved	80	19-164	Nut - Estock
17	46-44	Knob	81	20-156	Screw
18	7-364	Bracket Assy. - Yoke L.H.	82	2-151	Housing - Mower
19	20-145	Screw	83	22-90	Baffle - Front
20	11-106	Bushing - Spacer	84	7-300	Bracket Assy. - Q.W.A., L.H.
21	110-36	Chain - No. 48, 58 Rollers	85	7-301	Bracket Assy. - Q.W.A., R.H.
22	110-39	Master Link - No. 48	86	1-110	Blade
23	110-40	Half Link - No. 48	87	15-21	Adapter - Blade
24	108-45	Idler - Lever Assy.	88	16-1	Key - Engine Shaft
25	10-187	Guard - Trailing	89	21-190	Washer
26	21-197	Washer	90	28-4	Pin - Roll
27	10-164	Cover Assy. - Chain	91	16-30	Key - Clutch
28	43-373	Brace - Deck Assy.	92	39-38	Disc - Clutch
29	17-107	Clip - Yoke	93	75-6	Hinge - Clutch
30	110-37	Chain - No. 48, 30 Rollers	94	18-36	Bolt - Blade
31	26-80	Spacer - Sprocket	95	21-18	Washer
32	110-38	Chain - No. 48, 32 Rollers	96	26-97	Spacer - Blade Adapter
33	135-23	Sprocket	97	6-46	Yoke - Clutch
34	76-96	Spring	98	82-109	Rod - Clutch Pivot
35	20-269	Screw	99	2-165	Housing - Clutch
36	21-90	Washer - Lock	100	12-164	Plate - Shift Wire
37	100-3	Fitting - Grease	101	20-267	Screw - SMS
38	102-107	Shaft - Idler	102	17-80	Clamp - Casing
39	7-302	Bracket Assy. - Idler	103	9-55	Switch
40	76-80	Spring - Chain Tension	104	19-193	Nut
41	19-117	Nut	105	20-299	Bolt
42	21-14	Washer	106	9-59	Module (Recoil Start Only)
43	18-1	Bolt	107	19-65	Nut (Recoil Start Only)
44	20-240	Screw	108	20-282	Bolt (Recoil Start Only)
45	19-2	Nut - Keps (Elec. Start)	109	19-141	Nut (Recoil Start Only)
46	89-34	Hub Cap	121	21-199	Washer
47	19-1	Nut - Hex Keps	122	8-102*	Control - Head
48	17-123	Clamp	123	19-195*	Nut - Jam 5/16-24
49	20-283	Screw (Elec. Start)	124	47-575*	Cable w/casing
50	20-282	Screw			
51	18-125	Bolt - Rear Wheel			
52	3-135	Wheel Assy. (Includes Bearing)			
53	11-117	Bearing - Sleeve			
54	21-113	Washer			
55	12-170	Plate - Q.W.A.			
56	20-195	Screw			
57	19-147	Nut - Q.W.A.			
58	26-105	Spacer (Elec. Start)			
59	20-288	Screw			
60	19-141	Nut			
61	22-74	Baffle - Rear			
62	18-135	Bolt			
63	76-71	Spring - Q.W.A.			
64	137-9	Tip - Q.W.A. Spring			
65	79-121	Arm - Q.W.A.			

ELECTRIC START MODELS

110	47-565	Harness
111	17-124	Clip - Battery
112	12-158	Battery Plate
113	143-7	Battery
114	16-27	Key - Ignition
115	19-148	Nut - Face
116	43-368	Panel - Control
117	19-149	Nut - Lock
118	9-43	Switch - Lock
119	17-111	Clip - Harness
120	47-516	Charge Pack

OPTIONAL ACCESSORY

30-0300	Grass Catcher
30-0350	Replacement Bag

*Note: See pages 1-298 & 1-299 for clutch control without adjusting nuts.