



(REVISED JANUARY, 1974)

PARTS LIST FOR MODELS 12-3010, T33-3 & 4, 50070, 50403, 50486, C2-3010 & WT-34

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	18-88	Screw - Hex Hd	48	43-372	Main Support Assy
2	46-42	Knob - Throttle	49	18-41	Bolt - Hex Hd
	46-36	Knob - Throttle (WT-34 only)	50	122-44	Guard - Belt
3	8-85	Control - Throttle	51	19-117	Nut - Lock
	8-86	Control - Throttle (WT-34 only)	52	21-33	Washer - Flat
4	19-1	Nut - Hex	53	11-117	Bearing - Wheel
5	5-5	Grip - Handle	54	3-90	Wheel Assy - 8"
6	17-131	Clip - Cable	55	20-74	Bolt - Shoulder
7	19-139	Nut - Lock	56	21-62	Washer - Flat
8	56-18	Tip - Lever	57	74-14	Oil Seal
9	108-67	Lever - Engagement	58	11-17	Bearing - Sleeve
10	21-113	Washer - Curved	59	122-73	Guide - Belt
11	18-44	Bolt - Hex Hd	60	19-119	Nut - Lock
12	28-7	Cotter Hairpin	61	20-157	Bolt - Hex Hd
13	136-11	Drag Bar	62	84-21	Inner Tine Assy - L.H.
14	28-6	Pin - Clevis	63	84-23	Outer Tine Assy - L.H.
15	18-49	Bolt - Hex Washer Hd	64	20-189	Bolt - Hex Hd
16	41-163	Panel & Handle Assy	65	59-15	Shield - Bearing
	41-175	Panel (WT-34 only)	66	74-15	Oil Seal
17	26-24	Spacer - Tubing	67	11-18	Bearing - Needle
18	76-104	Spring - Compression	68	20-277	Screw
19	76-111	Spring - Cable	69	16-3	Key - Woodruff
20	47-538	Cable Assy	70	101-57	Worm Gear
21	7-371	Drag Bracket Assy (Replaces 7-345)	71	98-6	"O" Ring
22	122-45	Guide - Cable	72	28-49	Pin - Roll
23	20-131	Screw - Hex Hd	73	84-24	Outer Tine Assy - R.H.
24	105-87	Idler Pulley (Replaces 105-84)	74	84-22	Inner Tine Assy - R.H.
25	19-111	Nut - Lock	75	28-23	Pin - Roll
26	26-76	Spacer - Idler Arm	76	10-122	Plate - End Cover
27	18-3	Screw - Hex Hd	77	98-49	Retaining Ring
28	19-118	Nut - Hex	78	26-82	Spacer - End, Worm
29	105-61	Pulley - Engine	79	11-94	Bearing - Ball
30	20-255	Set Screw - Pulley	80	26-81	Spacer - Center, Worm
31	16-7	Key - Square	81	101-58	Worm
32	20-67	Bolt - Hex Hd (3/8-16 x 1")	82	102-89	Shaft - Worm
	20-151	Screw - Hex Hd (3/8-16 x 1-1/8")	83	114-5	Plug - Gear Box
33	19-141	Nut - Lock (No. 10-24)	84	2-196	Housing - Gear
	19-120	Nut - Lock (No. 10-32)	85	98-7	Retaining Ring
34	76-96	Spring - Arm Return	86	102-88	Shaft - Output
35	18-38	Bolt - Hex Hd	87	10-121	Cover - Gear Housing
36	7-350	Bracket - Handle R.H.	88	10-123	Housing Cover Assy
37	7-349	Bracket - Handle L.H.	89	4-169	Handle Bar Assy (WT-34 only)
38	98-70	Belt Retainer	90	18-41	Bolt
39	107-37	Belt - V			
40	20-282	Screw - Hex Hd. (No. 10-24 x 1/2)			
	20-236	Screw - Hex Hd. (No. 10-32 x 1/2)			
41	26-75	Spacer - Idler Arms			
42	21-158	Washer - Spacer			
43	79-110	Arm - Idler Mounting			
44	68-20	Hood - Tines			
45	20-145	Screw - Hex Hd			
46	105-65	Pulley - Driven			
47	2-197	Housing Assy - Gear			
					OPTIONAL ACCESSORY
			91	23-54	Furrowing Tool