


# Atlas

PARTS LIST FOR DIFFERENTIAL ASSEMBLY — PART NO. 128-12

ALWAYS ORDER BY PART NO. — NEVER BY REF. NO.

## DIFFERENTIAL

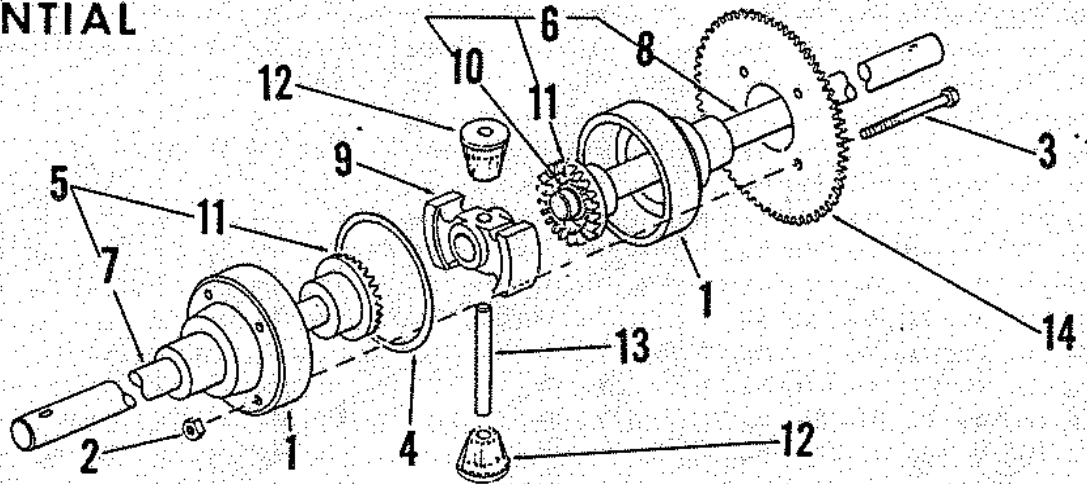

Ref. No.	Part No.	Description	Qty.	Ref. No.	Part No.	Description	Qty.
1	2-91	Housing-Differential	2	8	65-43	Axle - Short	1
2	19-97	Nut-Nylok	4	9	79-37	Arm - Cross	1
3	20-168	Screw-Hex Hd.	4	10	98-23	Ring - Snap	2
4	58-9	Gasket-Vellomoid	1	11	101-25	Gear - Bevel	2
5	65-40	Axle & Gear Assy - Long	1	12	101-26	Pinion-Bevel	2
6	65-41	Axle & Gear Assy - Short	1	13	102-48	Shaft-Pinion	1
7	65-42	Axle-Long	1	14	135-12	Sprocket	1