

BROADCAST SPREADER MODEL 45-02291

Item No.	Part No.	Description
1	43878	Agitator Wire
2	63698	Hopper/Support Assembly
3	47161	Handle Grip (2)
4	47144	Right Handle
5	47145	Left Handle
6	47143	Leg (2)
7	47160	Lever Cap
8	24444	Control Lever
9	47163	Control Rod
10	63699	Setting Cam Bracket Assembly
11	47157	Snap-In Bushing
12	47109	Feed Slide
13	63696	Impeller/Axle/Housing Assembly
14	47124	Impeller (Included in #63696)

Item No.	Part No.	Description
15	47168	Wheel (2)
16	44663	Push Nut (2)
17	47155	Bushing (2)
18	47167	Foot
19	47126	Hex Head Screw, #10-32 x 3/8"
20	47156	Slot Head Bolt, #10-32 x 1-1/4" (2)
21	43662	Hex Nut, #10-32 (4)
22	47159	Slot Head Bolt, #8 x 1/4" (2)
23	47162	Slot Head Bolt, #10-32 x 2" (2)
24	47169	Slot Head Bolt, #10-32 x 2" (3)
25	47170	Slot Head Bolt, #10-32 x 2-1/4"
26	47171	Hex Lock Nut, #10-32 (Nylon Insert)
27	43662	Hex Nut, SEMS #10-32 (3)
28	47110	Wing Nut, Self Threading

