

# BROADCAST SPREADER MODEL 45-0241

Item No.	Part No.	Description
1	43878	Agitator Wire
2	63698	Hopper/Support Assembly
3	47183	Handle Grip
4	47174	Control Arm
5	24446	Hitch Bracket (2)
6	47175	Tow Bar
7	47184	Clevis Pin
8	47134	Hitch Pin Clip (Hairpin)
9	47181	Coved Spacer
10	47172	Leg, Right Hand
11	47173	Leg, Left Hand
12	63761	Control Rod Assembly
13	63699	Setting Cam/Bracket Assembly
14	47157	Snap-In Bushing
15	47109	Flow Slide
16	63701	Impeller/Axle Housing Assembly

Item No.	Part No.	Description
17	47124	Impeller (Included in #63701)
18	47168	Wheel (2)
19	44663	Push Nut - Hub Cap (2)
20	47155	Split Bushing (2)
21	47156	Slot Head Bolt, #10-32 x 1-1/4" (4)
22	43662	Hex Nut, #10-32 (4)
23	47159	Slot Head Bolt, #8 x 1/4" (2)
24	47126	Hex Head Screw, #10-32 x 3/8"
25	47186	Slot Head Bolt, #10-32 x 1-1/2"
26	48187	Slot Head Bolt, 1/4-20 x 1/2"
27	47188	Slot Head Bolt, #10-32 x 1-3/4"
28	43648	Hex Head Bolt, 1/4-20 x 1-1/2" (2)
29	43013	Hex Lock Nut, 1/4-20 (2)
30	47189	Hex Lock Nut, 1/4-20 - Nylon Insert
31	43662	Hex Nut, #10-32
32	47171	Hex Lock Nut, #10-32 - Nylon Insert

