

BROADCAST SPREADER MODEL 45-0277/45-0278

Item No.	Part No.	Description	Item No.	Part No.	Description
1	47108	Plastic Leg (2)	13	44486	Screw, Hex Head #12 x 3/4" (2)
2	44663	Push Nut/Hub Cap (2)	14	47119	Leg Brace
3	47109	Flow Slide	15	47120	Wheel (2)
4	43878	Agitator Wire	16	63690	Axle/Impeller Assembly
5	47141	Wing Nut, 1/4-20 (3)	17	47124	Impeller (Included in #63690)
6	47112	Screw, #10-16 x 1/2" (5)	18	47126	Screw, Hex Head #10-32 x 3/8"
7	47113	Washer, Flat .22" x .78" (2)	19	47137	Handle Tube
8	46000	Carriage Bolt, 1/4-20 x 1-1/2" (3)	20	47134	Pin, Hair Cotter (3)
9	63688	Control Gauge Assembly	21	47135	Washer, 17/32" x 7/8"
10	24441	Control Gauge Clamp	22	47136	Clip, Gear Retainer
11	47110	Wing Nut, Self Threading	23	47122	Hopper (45-0277 Model) (Shown)
12	47118	Control Cable Assembly		47139	Hopper (45-0278 Model)
				47123	Owner's Manual

