

BROADCAST SPREADER MODEL 45-0280

| Item No. | Part No. | Description | Item No. | Part No. | Description |
|----------|----------|-------------------------------------|----------|----------|-------------------------------------|
| 1 | 47144 | Right Handle | 16 | 47109 | Flow Slide |
| 2 | 47145 | Left Handle | 17 | 47162 | Slot Head Bolt, #10-32 x 1-3/8" (2) |
| 3 | 47214 | Bearing (2) | 18 | 63705 | Impeller/Axle Assembly |
| 4 | 43662 | Hex Nut, #10-32 (4) | 19 | 47124 | Impeller (included in #63705) |
| 5 | 47156 | Slot Head Bolt, #10-32 x 1-1/4" (2) | 20 | 63704 | Hopper/Support Assembly |
| 6 | 43175 | Hex Head Bolt, 1/4-20 x 1/2" (4) | 21 | 47221 | Left Leg |
| 7 | 46978 | Hex Nut, 1/4-20 (4) | 22 | 47222 | Right Leg |
| 8 | 63699 | Setting Cam Assembly | 23 | 47218 | Drive Wheel |
| 9 | 47157 | Snap-In Bushing | 24 | 47217 | Idler Wheel |
| 10 | 47160 | Lever Cap | 25 | 47224 | Foot |
| 11 | 47161 | Handle Grip (2) | 26 | 47169 | Slot Head Bolt, #10-32 x 2" (3) |
| 12 | 43878 | Agitator Wire | 27 | 47170 | Slot Head Bolt, #10-32 x 2-1/4" |
| 13 | 47163 | Control Wire | 28 | 47171 | Hex Lock Nut, #10-32 |
| 14 | 24444 | Control Lever | 29 | 47110 | Self Threading Wing Nut |
| 15 | 47159 | Slot Head Bolt, #8 x 1/4" (2) | 30 | 47063 | Cotter Pin, 5/32" x 2" |
| | | | 31 | 714-0121 | Cotter Pin, 5/32" x 1" |
| | | | | 47223 | Owner's Manual |

