BROADCAST SPREADER MODEL 45-0281
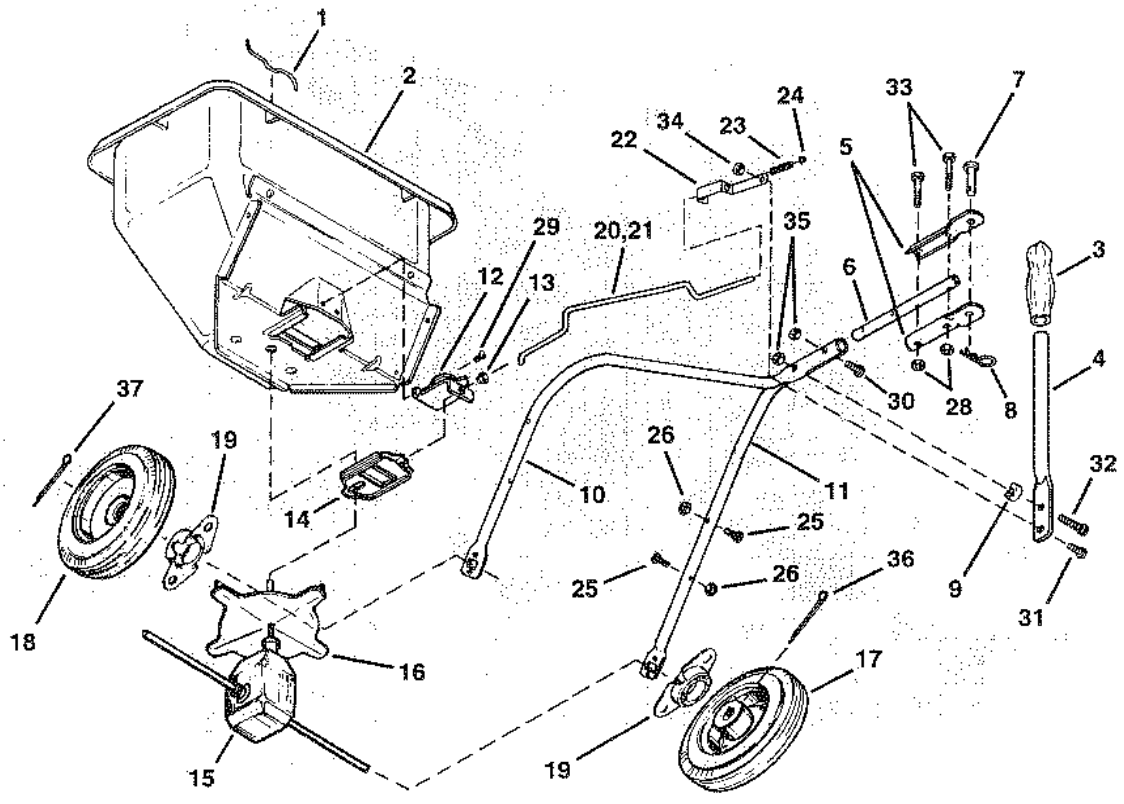
Item No.	Part No.	Description
1	43878	Agitator Wire
2	63704	Hopper/Support Assembly
3	47183	Handle Grip
4	47174	Control Arm
5	24446	Hitch Bracket (2)
		One with "ON-OFF" Decal
6	47175	Tow Bar
7	47184	Clevis Pin
8	47134	Hitch Pin Clip
9	47181	Coved Spacer
10	47200	Right Hand Leg
11	47199	Left Hand Leg
12	63699	Setting Cam/Bracket Assembly
13	47157	Snap-In Bushing
14	47109	Feed Slide
15	63705	Impeller/Axle/Housing Assembly
16	47124	Impeller (included in item 15)
17	47218	Wheel (Drive)
18	47217	Wheel (Idler)
19	47214	Bearing (2)
20	63761	Control Rod Assembly
21	47220	Control Rod (Included in item 20)
22	24445	Arm, Control Rod (Included in item 20)
23	47176	Spring (Included in item 20)
24	47177	Push Nut (Included in item 20)
25	47156	Slotted Head Bolt, #10-32 x 1-1/4" (4)
26	43662	Hex Nut (SEMS), #10-32 (4)
27	43175	Hex Bolt, 1/4-20 x 1/2" (4)
28	46978	Hex Nut (SEMS), 1/4-20 (6)
29	47159	Slotted Head Bolt, #8 x 1/4" (2)
30	47186	Slotted Head Bolt, #10-32 x 1-1/2"
31	47187	Slotted Head Bolt, 1/4-20 x 1/2"
32	47188	Slotted Head Bolt, #10-32 x 1-3/4"
33	43648	Hex Bolt, 1/4-20 x 1-1/2" (2)
34	47189	Hex Lock Nut, Nylon Insert, 1/4-20
35	47171	Hex Lock Nut, Nylon Insert, #10-32 (2)
36	47063	Cotter Pin, 5/32" x 2"
37	714-0121	Cotter Pin, 5/32" x 1"
	47215	Owner's Manual